


EOM

ENGINEERING OPERATION
& MAINTENANCE MANUAL

H800 High Pressure Bolted Metal Pump

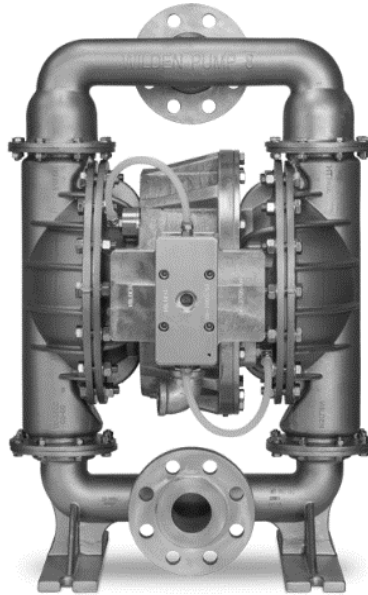

Where Innovation Flows

WILDEN®

Copyright

Copyright 2018 PSG®, a Dover Company. All rights reserved.

PSG reserves the right to modify the information and illustrations in this document without prior notice. The product described in this document is furnished under a license agreement or nondisclosure agreement. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or any means electronic or mechanical, including photocopying and recording, without the written permission of PSG, a Dover Company, except as described by the terms of those agreements.

This is a non-contractual document.

Trademarks


PSG and the PSG logo are registered trademarks of PSG. Wilden® is a registered trademark of PSG California LLC. Pro-Flo® SHIFT, Pro-Flo®, and Wil-Flex® are registered trademarks of PSG California LLC. Chem-Fuse™, Pure-Fuse™, Saniflex™, and Bunalast™ are trademarks of PSG California LLC.

All trademarks, names, logos and service marks (collectively “trademarks”) in this document are registered and unregistered trademarks of their respective owners. Nothing contained in this document should be construed as granting any license or right to use any trademark without the prior written permission of the trademark owner.

Warranty

Each and every product manufactured by Wilden is built to meet the highest standards of quality. Every pump is functionally tested to ensure integrity of operation. Wilden warrants that pumps, accessories and parts manufactured or supplied by it to be free from defects in material and workmanship for a period of five (5) years from date of installation or six (6) years from date of manufacture, whichever comes first.

For more information, and to register your Wilden pump for warranty, please visit <https://www.psgdover.com/wilden/support/warranty-registration>.

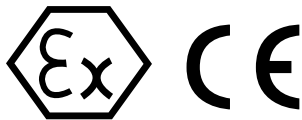Certifications

CONTENTS

SECTION 1: Precautions – Read First!	4
SECTION 2: Wilden Pump Designation System	5
SECTION 3: How It Works	6
SECTION 4: Dimensional Drawings	7
SECTION 5: Performance	8
H800 Metal	8
Suction Lift Capability	9
SECTION 6: Suggested Installation, Operation, Maintenance, and Troubleshooting	10
SECTION 7: Disassembly/Reassembly	13
Pump Disassembly	13
Air Valve/Center Section Disassembly	16
Power Cylinder Reassembly	18
Reassembly Hints and Tips	19
SECTION 8: Exploded View and Parts List	21
SECTION 9: Elastomer Options	25

SECTION 1

PRECAUTIONS – READ FIRST!



WARNING: Always wear safety glasses when operating a pump to avoid eye injury. If diaphragm rupture occurs, material being pumped may be forced out of the air exhaust.



CAUTION: Do not apply compressed air to the exhaust port – pump will not function.



CAUTION: Do not over-lubricate air supply– excess lubrication will reduce pump performance. Pump is pre-lubed.

**TEMPERATURE LIMITS:**

Acetal	-29°C to 82°C	-20°F to 180°F
Buna-N	-12°C to 82°C	10°F to 180°F
Bunalex™	-40°C to 82°C	-40°F to 180°F
Neoprene	-18°C to 93°C	0°F to 200°F
Nordel EPDM	-51°C to 138°C	-60°F to 280°F
Nylon	-18°C to 93°C	0°F to 200°F
PFA	-7°C to 107°C	45°F to 225°F
Polypropylene	0°C to 79°C	32°F to 175°F
Polyurethane	-12°C to 66°C	10°F to 150°F
PVDF	-12°C to 107°C	10°F to 225°F
Saniflex™	-29°C to 104°C	-20°F to 220°F
SIPD PTFE with EPDM-backed	4°C to 137°C	40°F to 280°F
SIPD PTFE with Neoprene-backed	4°C to 93°C	40°F to 200°F
PTFE*	4°C to 104°C	40°F to 220°F
FKM	-40°C to 177°C	-40°F to 350°F
Wil-Flex®	-40°C to 107°C	-40°F to 225°F

*4°C to 149°C (40°F to 300°F) - 13 mm (1/2") and 25 mm (1") models only.

NOTE: Not all materials are available for all models. See "Wilden Pump Designation System" for material options for your pump.



CAUTION: When choosing pump materials, be sure to check the temperature limits for all wetted components. Example: FKM has a maximum limit of 177°C (350°F), but polypropylene has a maximum limit of only 79°C (175°F).



CAUTION: Maximum temperature limits are based on mechanical stress only. Certain chemicals will reduce maximum safe operating temperatures significantly. Consult the Chemical Resistance Guide for chemical compatibility and temperature limits.



WARNING: Prevention of static sparking — If static sparking occurs, fire or explosion could result. Pump, valves, and containers must be grounded to a proper grounding point when handling flammable fluids and whenever discharge of static electricity is a hazard.



CAUTION: All Wilden pumps are capable of passing solids. Use a strainer on the pump intake to ensure that the pump's rated solids capacity is not exceeded.



CAUTION: Do not exceed 5.9 bar (85 psig) air supply pressure.



CAUTION: Do not exceed 82°C (180°F) air inlet temperature for all models.



CAUTION: All piping, valves, gauges and other components installed on the liquid discharge must have a minimum pressure rating of 20 .7 bar (300 psig).



CAUTION: The discharge pressure generated by this pump is 3X the inlet pressure supplied.



CAUTION: The process fluid and cleaning fluids must be compatible chemically with all wetted pump components.



CAUTION: Before attempting any maintenance or repair, disconnect the compressed air line to the pump and allow all air pressure to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.



CAUTION: Thoroughly flush pumps before installing them into process lines. Clean and/or sanitize FDA- and USDA-approved pumps before using them.



CAUTION: Before attaching the air line to the pump, blow out the air line for 10 to 20 seconds to make sure all pipeline debris is clear. Use an in-line air filter. A 5µ (micron) air filter is recommended.



CAUTION: Before installation, tighten all hardware.



NOTE: Materials of construction and elastomer material may influence suction lift parameters. Please refer to "Performance" for specifics.



NOTE: When installing PTFE diaphragms, it is important to tighten outer pistons simultaneously (turning in opposite directions) to ensure tight fit. (See "Maximum Torque Specifications").



NOTE: Some PTFE-fitted pumps come standard from the factory with expanded PTFE gaskets installed in the diaphragm bead of the liquid chamber. PTFE gaskets cannot be re-used.



NOTE: In the event of a power failure, close the shut-off valve if you do not want the pump to restart when the power returns.



NOTE: The Safety Supplement document is a part of the manual. Please refer to the Safety Supplement document for a complete list of safety considerations including considerations for safe operation and maintenance of pumps marked for ATEX environments before starting the pump.



WARNING: This product can expose you to chemicals including Nickel, Chromium, Cadmium, or Cobalt, which are known to the State of California to cause cancer and/or birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WILDEN PUMP DESIGNATION SYSTEM

Maximum Flow Rate:
360 lpm (95 gpm)

MODEL H800 = 51 MM (2") HIGH PRESSURE XH800 = 51 MM (2") HIGH PRESSURE ATEX	AIR VALVE A = ALUMINUM	VALVE BALLS FW = SANITARY WIL-FLEX™ [SANTOPRENE® (TWO BLACK DOTS)] TF = PTFE (WHITE) WF = WIL-FLEX™ [SANTOPRENE® (THREE BLACK DOTS)]
WETTED PATH H = ALLOY C S = STAINLESS STEEL W = DUCTILE IRON	DIAPHRAGMS FWL = SANITARY WIL-FLEX™, IPD [SANTOPRENE® (TWO BLACK DOTS)] FWS = SANITARY WIL-FLEX™, EZ-INSTALL [SANTOPRENE® (TWO BLACK DOTS)] TWS = FULL-STROKE PTFE W/WIL-FLEX™ BACK-UP WWL= WIL-FLEX™ IPD [SANTOPRENE® (THREE BLACK DOTS)]	VALVE SEATS H = ALLOY C M = MILD STEEL S = STAINLESS STEEL
OUTER PISTON H = ALLOY C S = STAINLESS STEEL W = DUCTILE IRON Z = NO OUTER PISTON		VALVE SEAT O-RINGS TF = PTFE (WHITE) WF = WIL-FLEX™ [SANTOPRENE® (THREE BLACK DOTS)]
AIR CHAMBERS S = STAINLESS STEEL W = DUCTILE IRON		
CENTER BLOCK A = ALUMINUM		

0504 DIN flange

! NOTE: Most elastomeric materials use colored dots for identification

! NOTE: Not all models are available with all material options

SECTION 3

HOW IT WORKS – AIR-OPERATED DOUBLE-DIAPHRAGM PUMP

The Wilden diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

Preface: The H800 uses an integral power-amplifier piston together with two diaphragms to yield a pressure ratio of 3:1 (e.g., 85 psig air inlet will develop pump discharge pressures up to 250 psig). Air is simultaneously directed behind the amplifier piston as well as one of the diaphragms via specialized air manifold porting. The sum of the two surface areas is three times that of the diaphragm. Therefore, the discharge is amplified by a 3:1 pressure output ratio.

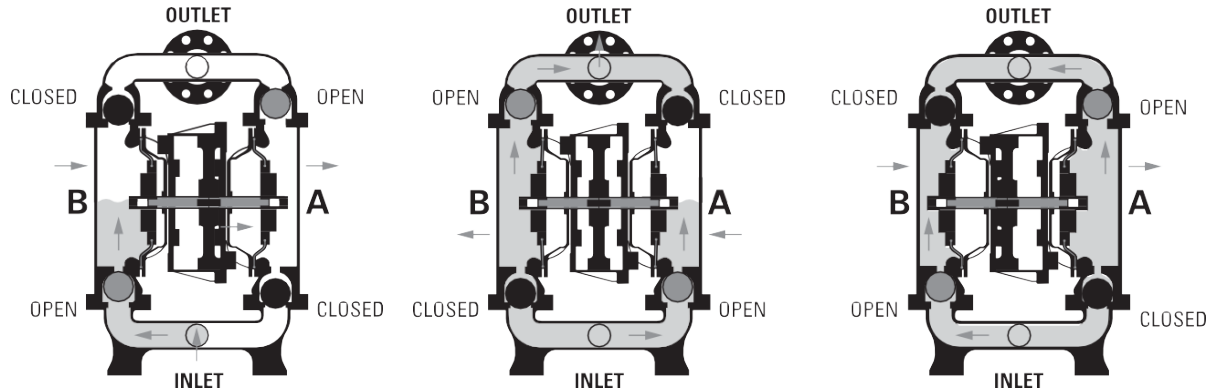


FIGURE 1 When air pressure is supplied to the pump, the air valve directs pressure to the back side of diaphragm A. The compressed air moves the diaphragm away from the center section of the pump. The opposite diaphragm is pulled in by the shaft connected to the pressurized diaphragm. Diaphragm B is on its suction stroke; air behind the diaphragm has been forced out to the atmosphere through the exhaust port. The movement of diaphragm B towards the center section of the pump creates a vacuum within chamber B. Atmospheric pressure forces fluid into the inlet manifold forcing the inlet valve ball off of its seat. Liquid is free to move past the inlet valve ball and fill the liquid chamber (see shaded area).


FIGURE 2 Once the shaft has reached the end of its stroke, the air valve redirects pressurized air to the back side of diaphragm B.

FIGURE 3 At completion of the stroke, the air valve again redirects air to the back side of diaphragm A, which starts diaphragm B on its exhaust stroke. As the pump reaches its original starting point, each diaphragm has gone through one exhaust and one discharge stroke. This constitutes one complete pumping cycle. The pump may take several cycles to completely prime depending on the condition of the application.

SECTION 4

DIMENSIONAL DRAWING

H800 METAL

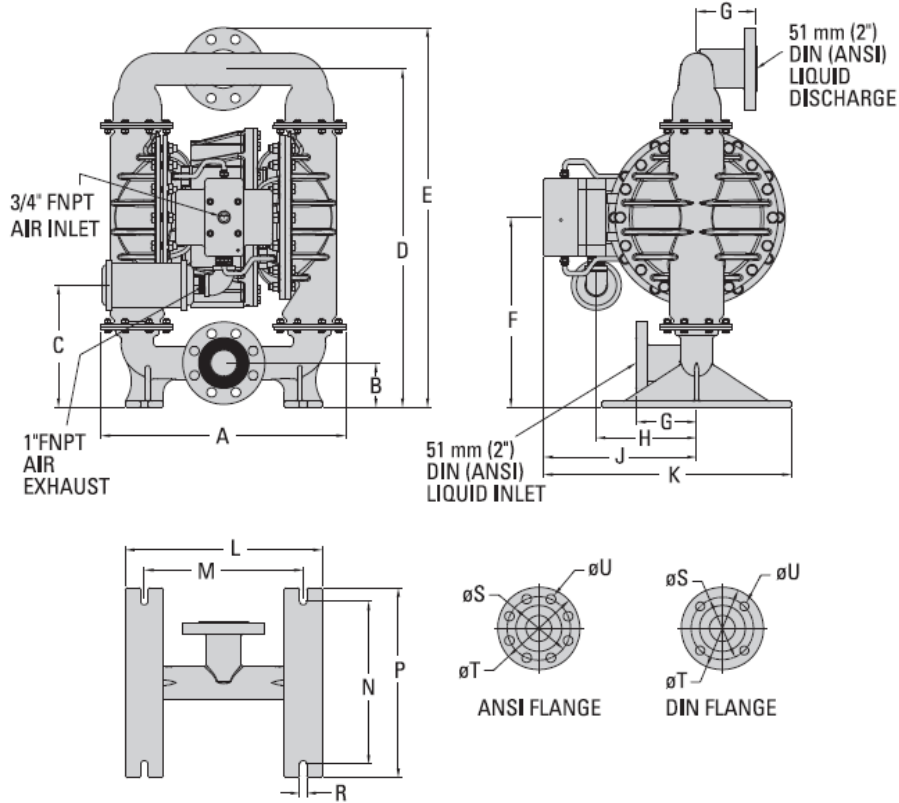

DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	490	19.3
B	89	3.5
C	245	9.6
D	677	26.7
E	760	29.9
F	378	14.9
G	120	4.7
H	201	7.9
J	307	12.1
K	498	19.6
L	394	15.5
M	318	12.5
N	325	12.8
P	379	14.9
R	14	0.6
ANSI FLANGE 300 LB		
S	127 DIA.	5.0 DIA.
T	165 DIA.	6.5 DIA.
U	19 DIA.	0.8 DIA.
DIN FLANGE PN40		
S	125 DIA.	4.9 DIA.
T	165 DIA.	6.5 DIA.
U	18 DIA.	0.7 DIA.

LW0192 REV. B


SECTION 5

PERFORMANCE

H800 METAL

Ship Weight.....Ductile Iron 128 kg (283 lb)
 Stainless Steel 128 kg (283 lb)
 Alloy C 134 kg (295 lb)
 Air Inlet.....3/4"
 Inlet.....51 mm (2")
 Outlet.....51 mm (2")
 Suction Lift.....3.7 m Dry (12.0')
 9.0 m Wet (29.5')
 Disp. Per Stroke¹.....1.67 L (0.44 gal)
 Max. Flow Rate.....360 lpm (95 gpm)
 Max. Size Solids.....12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

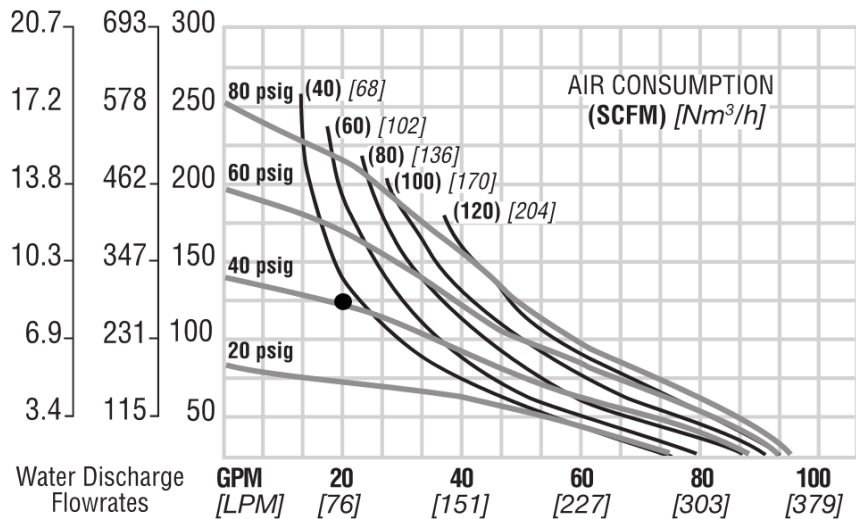

Example: To pump 76 lpm (20 gpm) against a discharge pressure head of 8.6 bar (125 psig) requires 2.9 bar (42 psig) and 65 Nm³/h (38 scfm) air consumption.


Flow rates indicated on chart were determined by pumping water. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump's performance curve.

Caution: Do not exceed 5.9 bar (85 psig) air supply pressure.

SUCTION LIFT CAPABILITY

**H800 METAL SUCTION
LIFT CAPABILITY**

Suction-lift curves are calibrated for pumps operating at 305 m (1,000') above sea level. This chart is meant to be a guide only. There are many variables that can affect your pump's operating characteristics. The number of intake and discharge elbows, viscosity of pumping fluid, elevation (atmospheric pressure) and pipe friction loss all affect the amount of suction lift your pump will attain.

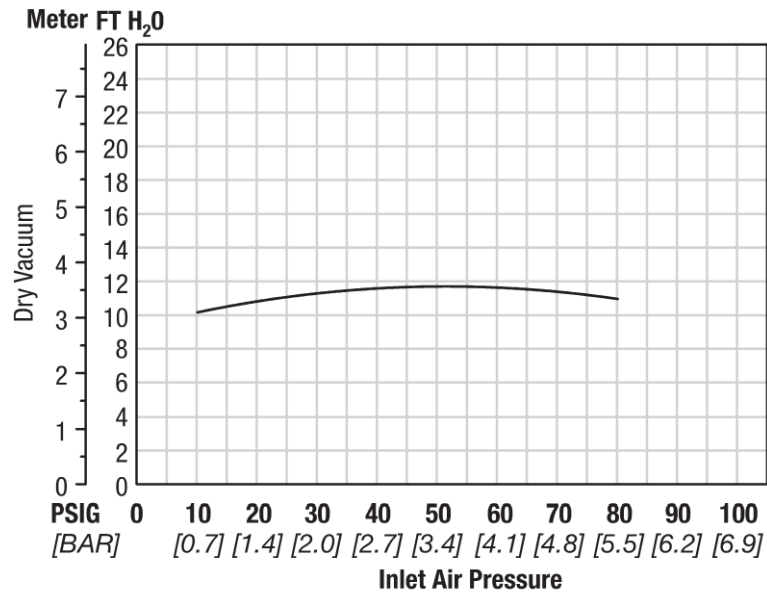

SECTION 6

SUGGESTED INSTALLATION, OPERATION, MAINTENANCE
AND TROUBLESHOOTING

Wilden pumps are designed to meet the performance requirements of even the most demanding pumping applications. They have been designed and manufactured to the highest standards and are available in a variety of liquid path materials to meet your chemical resistance needs. Refer to "Performance" for an in-depth analysis of the performance characteristics of your pump. Wilden offers the widest variety of elastomer options in the industry to satisfy temperature, chemical compatibility, abrasion resistance and flex concerns.

The suction pipe size should be at least equal to or larger than the diameter size of the suction inlet on your Wilden pump. The suction hose must be a non-collapsible, reinforced type because these pumps are capable of pulling a high vacuum. Discharge piping should also be equal to or larger than the diameter of the pump discharge, which will help reduce friction losses.



CAUTION: All fittings and connections must be airtight. Otherwise, pump suction capability will be reduced or lost.

Months of careful planning, study and selection efforts can result in unsatisfactory pump performance if installation details are left to chance. You can avoid premature failure and long-term dissatisfaction by exercising reasonable care throughout the installation process.

Location

Noise, safety and other logistical factors usually dictate where equipment will be situated on the production floor. Multiple installations with conflicting requirements can result in congestion of utility areas, leaving few choices for additional pumps.

Within the framework of these and other existing conditions, locate every pump in such a way that the following six key factors are balanced against each other to maximum advantage:

- **Access:** First, the location should be accessible. If it's easy to reach the pump, maintenance personnel will be able to perform routine inspections and adjustments more easily. If major repairs become necessary, ease of access can play a key role in speeding the repair process and reducing total downtime.
- **Air Supply:** Every pump location should have an air line large enough to supply the volume of air necessary to achieve the desired pumping rate. Use up to a maximum of 5.9 bar (85 psig) air supply pressure.
- **Solenoid Operation:** When operation is controlled by a solenoid valve in the air line, three-way valves should be used. This valve allows trapped air between the valve and the pump to bleed off, which improves pump performance. You can estimate pumping volume by counting the number of strokes per minute, and then multiplying that figure by the displacement per stroke.
- **Muffler:** Using the standard Wilden muffler, sound levels are reduced below OSHA specifications. You can use other mufflers to reduce sound levels farther, but they usually reduce pump performance.
- **Elevation:** Selecting a site that is well within the pump's dynamic lift capability will assure that loss-of-prime issues will be eliminated. In addition, pump efficiency can be adversely affected if proper attention is not given to site location.
- **Piping:** Final determination of the pump site should not be made until the piping challenges of each possible location have been evaluated. The impact of current and future installations should be considered ahead of time to make sure that inadvertent restrictions are not created for any remaining sites.

The best choice possible will be a site involving the shortest and straightest hook-up of suction and discharge piping. Unnecessary elbows, bends and fittings should be avoided. Pipe sizes should be selected to keep friction losses within practical limits. All piping should be supported independently of the pump. In addition, the piping should be aligned to avoid placing stress on the pump fittings.

Flexible hose can be installed to aid in absorbing the forces created by the natural reciprocating action of the pump. If the pump is to be bolted down to a solid location, a mounting pad placed between the pump and the foundation will assist in minimizing pump vibration. Flexible connections between the pump and rigid piping will also assist in minimizing pump vibration.

If the pump is to be used in a self-priming application, make sure that all connections are airtight and that the suction lift is within the model's ability.



NOTE: Materials of construction and elastomer material have an effect on suction lift parameters. Please refer to "Performance" for specifics.

When pumps are installed in applications involving flooded suction or suction head pressures, a gate valve should be installed in the suction line to permit closing of the line for pump service.

Pumps in service with a positive suction head are most efficient when inlet pressure is limited to 0.5–0.7 bar (7–10 psig). Premature diaphragm failure may occur if positive suction is 0.7 bar (10 psig) and higher.

Single-Point Exhaust

Pro-Flo SHIFT pumps can be used for submersible applications when using the Pro-Flo SHIFT's single-point exhaust.




CAUTION: All Wilden pumps are capable of passing solids. Use a strainer on the pump intake to ensure that the pump's rated solids capacity is not exceeded.



CAUTION: Do not exceed 5.9 bar (85 psig) air supply pressure.

SUGGESTED INSTALLATION, OPERATION, MAINTENANCE AND TROUBLESHOOTING

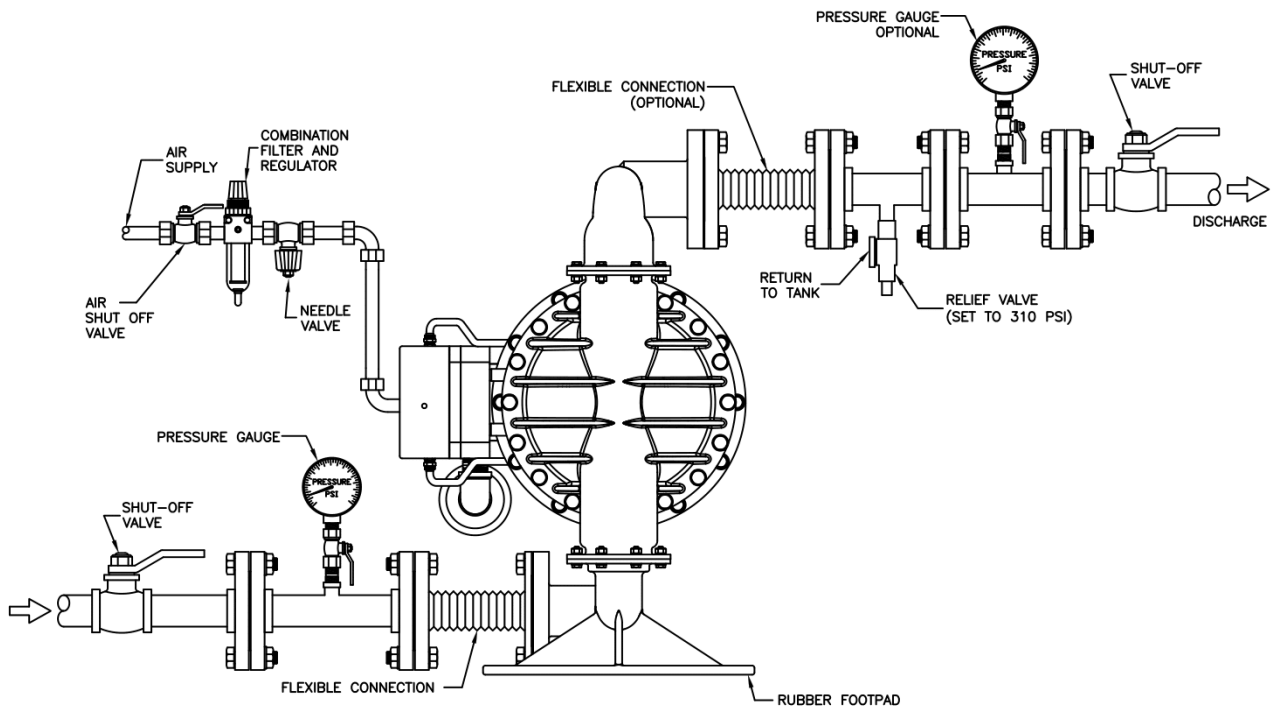

NOTE: In the event of a power failure, close the shut-off valve if you do not want the pump to restart when the power returns.

Air-Operated Pumps: To stop the pump from operating in an emergency, simply close the shut-off valve (user-supplied) installed in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. This shut-off valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency.

Operation

Pump discharge rate can be controlled by limiting the volume and/or pressure of the air supply to the pump. An air regulator is used to regulate air pressure. A needle valve is used to regulate volume. Pump discharge rate also can be controlled by throttling the pump discharge by partially closing a valve in the discharge line of the pump. This action increases friction loss, which reduces flow rate. (See "Performance") This is useful when the need exists to control the pump from a remote location. When the pump discharge pressure equals or exceeds the air supply pressure, the pump will stop. No bypass or pressure relief valve is needed, and pump damage will not occur. The pump has reached a "deadhead" situation and can be restarted by reducing the fluid discharge pressure or increasing the air inlet pressure. The Wilden High Pressure Pumps run solely on compressed air and does not generate heat, therefore your process fluid temperature will not be affected.

Maintenance and Inspections

Because each application is unique, maintenance schedules may be different for every pump. Frequency of use, line pressure, viscosity and abrasiveness of process fluid all affect the parts life of a Wilden pump. Periodic inspections have been found to offer the best means for preventing unscheduled pump downtime. Personnel familiar with the pump's construction and service should be informed of any abnormalities that are detected during operation.

Records

When service is required, a record should be made of all necessary repairs and replacements. Over a period of time, such records can become a valuable tool for predicting and preventing future maintenance problems and unscheduled downtime. In addition, accurate records make it possible to identify pumps that are poorly suited to their applications.

SUGGESTED INSTALLATION, OPERATION, MAINTENANCE AND TROUBLESHOOTING

Troubleshooting

Pump will not run or runs slowly.

1. Remove plug from pilot spool exhaust.
2. Ensure that the air inlet pressure is at least 0.4 bar (5 psig) above startup pressure and that the differential pressure (the difference between air inlet and liquid discharge pressures) is not less than 0.7 bar (10 psig).
3. Check air inlet filter for debris (see "Suggested Installation, Operation, Maintenance and Troubleshooting").
4. Check for extreme air leakage (blow by) that would indicate worn seals/bores in the air valve, pilot spool and main shaft.
5. Disassemble the pump and check for obstructions in the air passageways or objects that would obstruct the movement of internal parts.
6. Check for sticking ball check valves.
 - a. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seals with proper elastomers.
 - b. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.
7. Check for any broken inner piston that would cause the air valve spool to be unable to shift.

Pump runs, but little or no product flows.

1. Check for pump cavitation. Slow pump speed down to allow thick material to flow into liquid chambers.
2. Verify that vacuum required to lift liquid is not greater than the vapor pressure of the material being pumped (cavitation).
3. Check for sticking ball check valves.
 - a. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seals with proper elastomers.
 - b. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.

Pump air valve freezes.

1. Check for excessive moisture in the compressed air.
 - a. Either install a dryer or a hot air generator for compressed air.
 - b. Alternatively, you may use coalescing filter to remove the water from the compressed air in some applications.

Air bubbles in pump discharge.

1. Check for a ruptured diaphragm.
2. Check tightness of outer pistons (see "Disassembly/Reassembly").
3. Check tightness of fasteners and integrity of O-rings and seals, especially at intake manifold.
4. Ensure pipe connections are airtight.

Product comes out air exhaust.

1. Check for a diaphragm rupture.
2. Check the tightness of the outer pistons to the shaft.

SECTION 7

DISASSEMBLY / REASSEMBLY

PUMP DISASSEMBLY

Tools Required:

- 1/2" Wrench
- 9/16" Wrench
- 5/8" Wrench
- 3/4" Wrench
- 7/8" Wrench
- 1" Wrench
- 15/16" Wrench
- 5/64" Hex-Head Wrench
- 5/32" Hex-Head Wrench
- 1/4" Hex-Head Wrench
- 5/16" Hex-Head Wrench
- O-Ring Pick
- Adjustable Wrench
- Snap-Ring Pliers




CAUTION: Before attempting any maintenance or repair, disconnect the compressed air line to the pump and allow all air pressure to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.




NOTE: Your specific pump model may vary from the configuration shown; however, pump disassembly procedure will be the same.




NOTE: Replace worn parts with genuine Wilden parts for reliable performance.

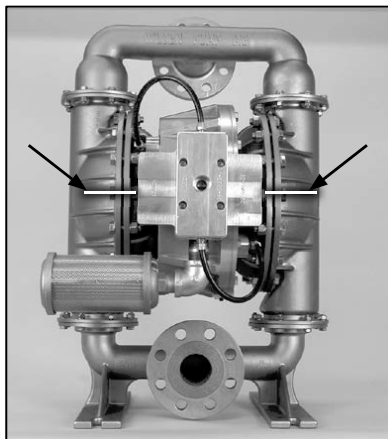**Step 1**

Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.

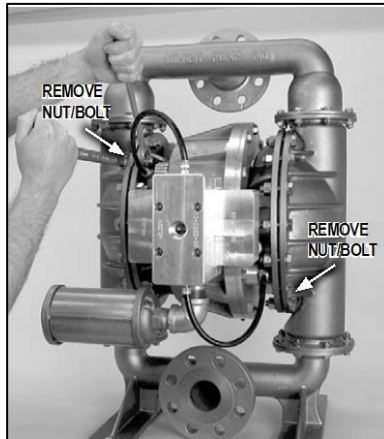**Step 2**

Using a 3/4" wrench, remove liquid chamber fasteners adjacent to relief valves.

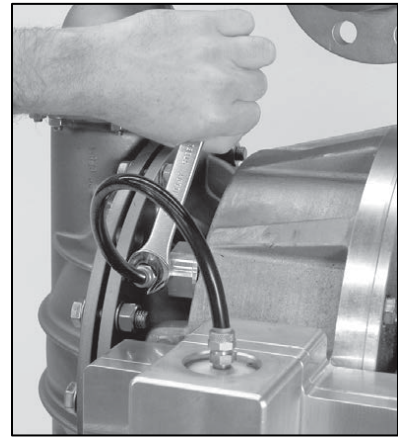**Step 3**


Using a 9/16" wrench, loosen tubing nuts located by each pressure relief valve.

DISASSEMBLY / REASSEMBLY



Step 4

Using a 1/2" wrench, loosen pipe fitting and elbow. This will allow easy access to the relief valve.

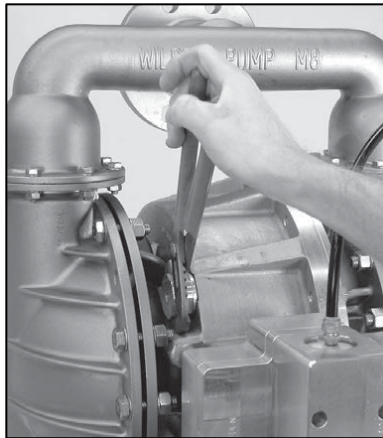


Step 5

Using an adjustable wrench, remove each pressure relief valve.



Step 6


Using a 5/64" hex-head wrench, remove the four fasteners to disassemble the pressure relief valve.

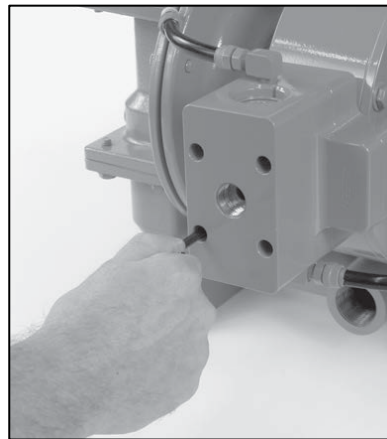

Step 7


Inspect for nicks, gouges, chemical attack or abrasive wear and reassemble when complete. Replace if necessary, with genuine Wilden parts.

NOTE: Pressure relief valves are sold as an assembly only.

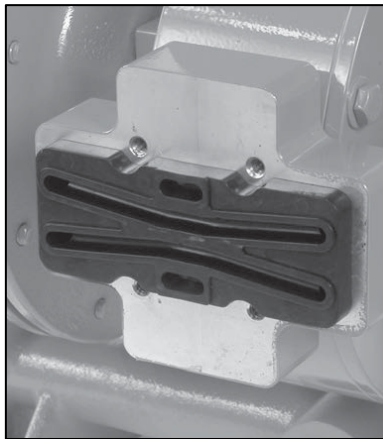

Step 8


Using a 1/4" hex-head wrench, remove the fasteners that connect the air valve and air valve gasket to the center section and lift air valve and isolator cover away from pump.

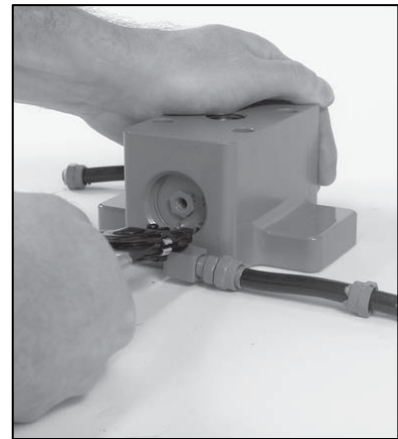

Step 9

Using a pair of snap-ring pliers, remove the top snap-ring from the air valve body.


DISASSEMBLY / REASSEMBLY

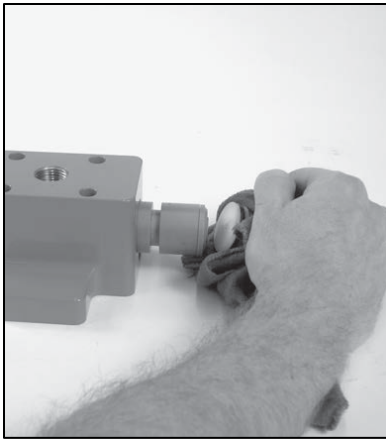

Step 10


Hints & Tips – Using an air nozzle, alternately pressurize the 1/8" NPT ports, fittings or Pressure Relief Valve tubing until the bottom end cap is forced from the air valve body,

CAUTION: The end cap may come out with considerable force. Position a shop rag over the bottom end cap to ensure that the end cap doesn't harm the pump technician or anyone else in the immediate area.

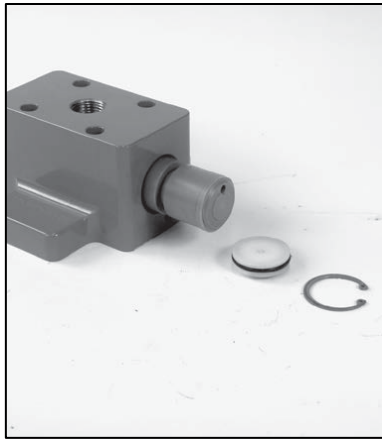


Step 11

Inspect: air piston (including air valve rings), air valve body, and air valve end cap for nicks, gouges, chemical attack, or abrasive wear. Replace (if necessary) with genuine Wilden parts.

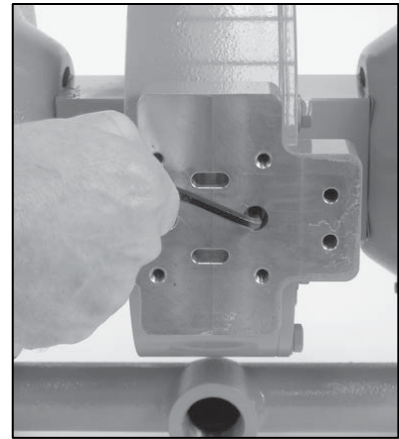


Step 12

Using a 5/16" hex-head wrench, remove the two air valve manifold fasteners.

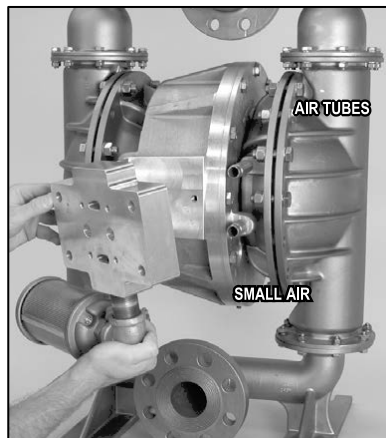


Step 13

Located behind the air valve manifold are four tubes (two small and two larger) sealed by O-rings. Remove all four tubes from pump.

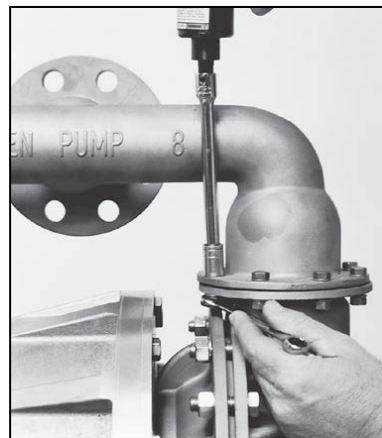

Step 14


Using a 1/2" wrench or socket, remove discharge manifold and fasteners.

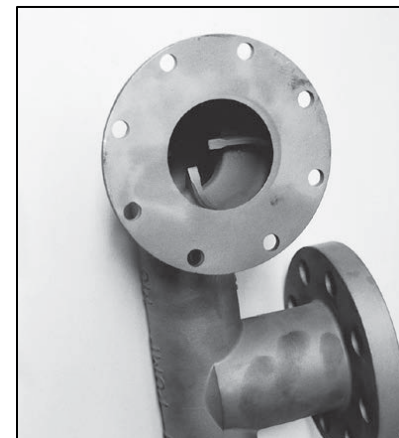

Step 15

After removing discharge manifold, inspect for abrasion in the ball cage area.


DISASSEMBLY / REASSEMBLY

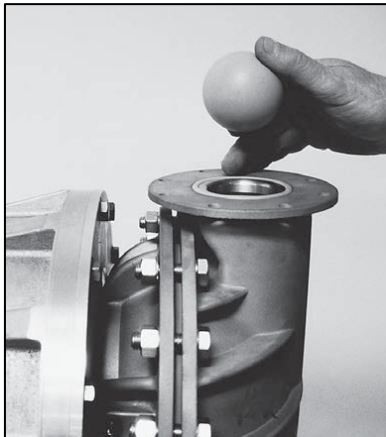

Step 16

Remove valve ball, valve seat, valve seat O-ring and manifold O-ring and inspect.


Hints & Tips: When reinstalling the valve seat, position valve seat square side up,

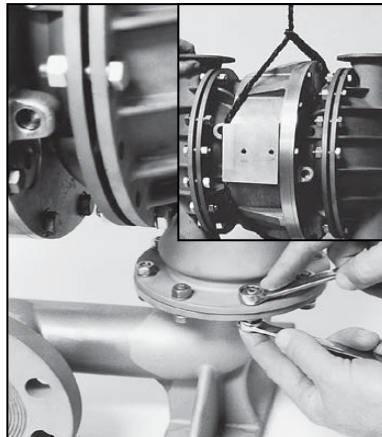

Step 17


Prior to disconnecting the inlet manifold from the liquid chambers, place the pump assembly on its side. Using a 1/2" wrench or socket, remove the inlet manifold fasteners.

CAUTION: The center assembly is very heavy and could cause injury to the pump technician or anyone else in the immediate area.

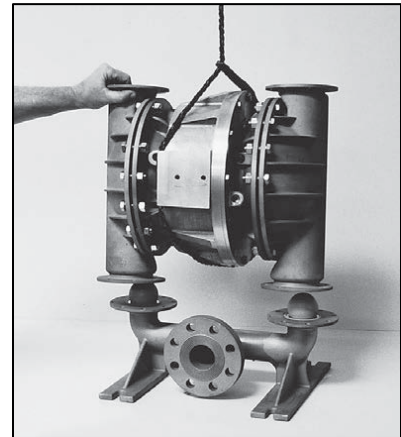


Step 18

Hints & Tips – Due to the liquid chamber design, the pump can be positioned on one liquid chamber as shown; you can use the liquid chamber to assist with removal of the manifolds or opposite liquid chamber.

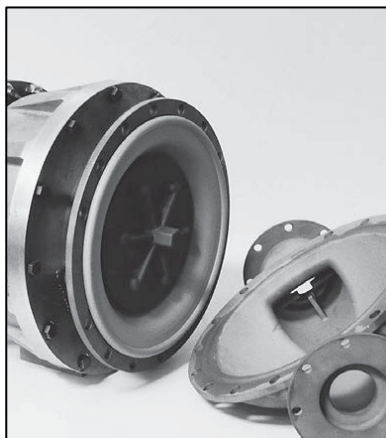


Step 19

With the liquid chambers removed and using extreme caution, lower the power cylinder and air chambers to a sturdy flat surface and position on the flat side of the power cylinder.

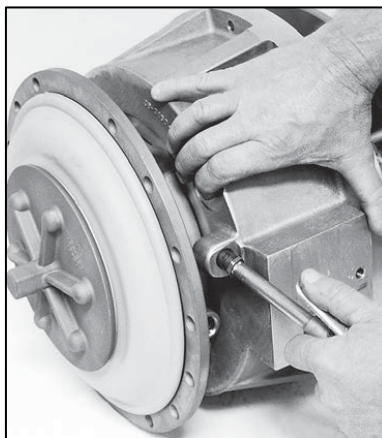

Step 20 (Air Valve Disassembly)


Rotate power cylinder so that the front (flat) of the power cylinder is accessible. Using an air nozzle with a rubber tip and placing a suitable object over the pressure relief valve port, pressurize air tube port. This will cause the diaphragm assembly to move to one side for ease of disassembly.

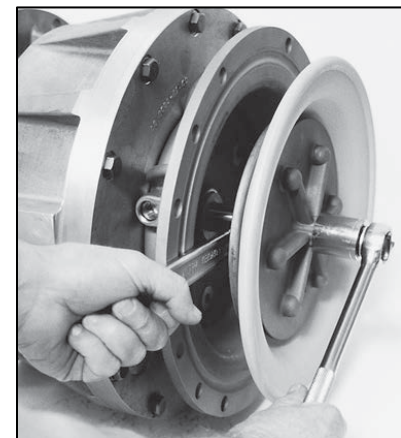

Step 21


Using a 7/8" open-end wrench placed on the flat of the diaphragm shaft, and a 1" wrench placed on the outer piston lug, remove the diaphragm assembly by turning counterclockwise.

DISASSEMBLY / REASSEMBLY

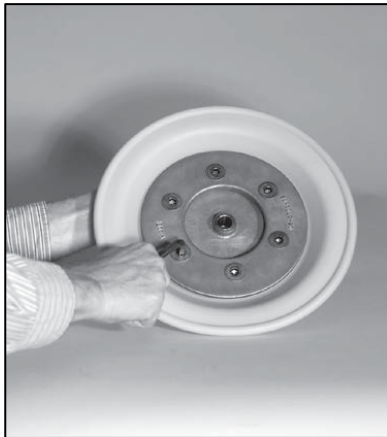


Step 22

Using a 5/16" hex-head wrench, remove the fasteners that connect the inner piston to the diaphragm assembly. Inspect diaphragm for nicks, gouges, chemical attack or abrasion. Replace if necessary, with genuine Wilden parts.

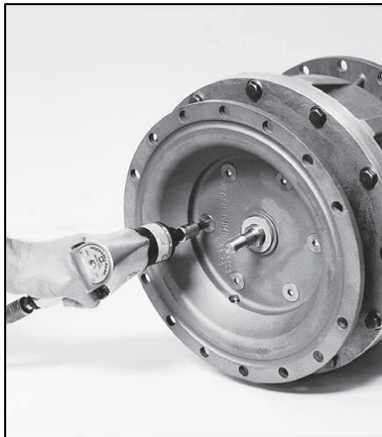


Step 23

Using a 5/16" hex-head wrench, remove the air chamber fasteners.

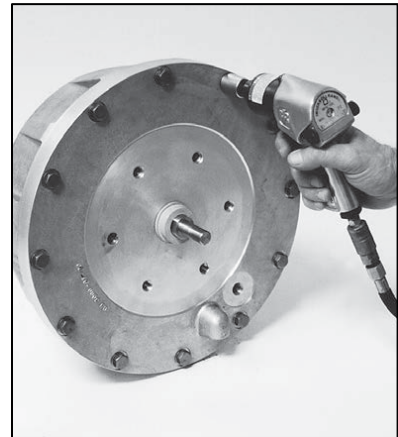


Step 24

Using a 5/8" wrench, remove the fasteners that connect the power cylinder cover to the power cylinder body.

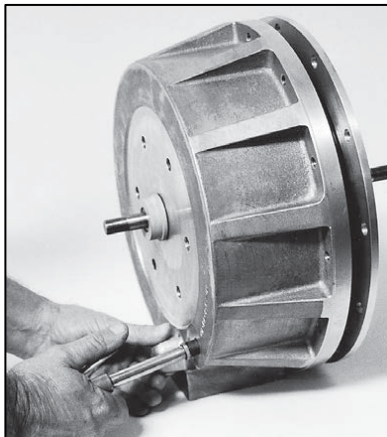


Step 25

Using an air nozzle with a rubber tip, apply air to the relief valve port. This will force the power cylinder cover away from the power cylinder body. Inspect shaft bushing seals and O-ring on power cylinder cover for damage.

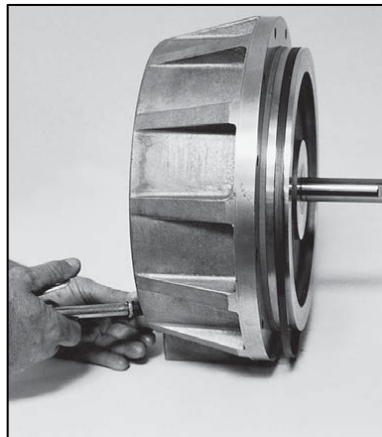

Step 26


Continue to apply air pressure to the relief valve port until the power cylinder piston is moved out of the power cylinder body.

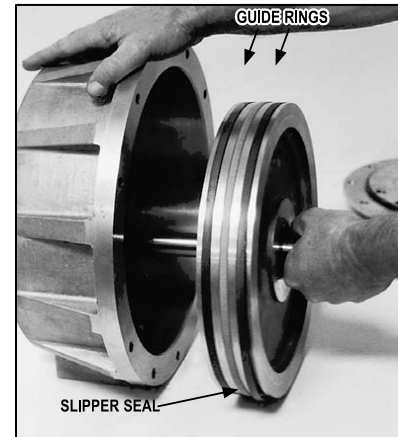

Step 27

Using one hand and steadying the power cylinder body with the other, remove power cylinder piston. Inspect the slipper seal and guide rings located on the power piston for damage.

DISASSEMBLY / REASSEMBLY

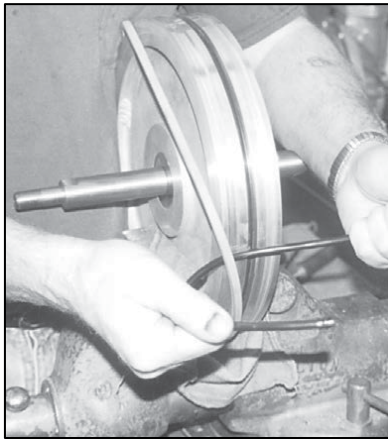

Power Cylinder Reassembly Step 1

After attaching the diaphragm shaft and bushing to the power cylinder piston, place power cylinder piston in vice with soft jaws (do not damage piston). Next, install new slipper seal.

HINTS & TIPS: Using a strip of material (like an old O-ring), slide the material back and forth until the slipper seal is positioned above the center groove.



Step 2


Next, place the power cylinder and power cylinder piston on top of two blocks of wood or equivalent.



Step 3


Insert new guide rings in outer grooves. Very easily, begin to maneuver the power cylinder piston into the power cylinder body.

HINTS & TIPS: A conical (tapered) piece of cylindrical sheet material or equivalent can be used to hold the guide rings in place as the power cylinder piston slides into the power cylinder body.

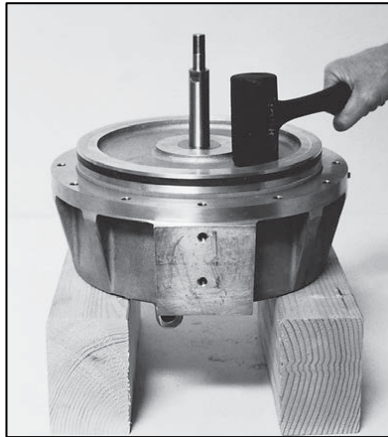

Step 4

Using a rubber mallet, lightly tap power cylinder piston in a circular fashion until piston is maneuvered completely into power cylinder body. When performing this task, use caution to not damage the guide rings or slipper seal.

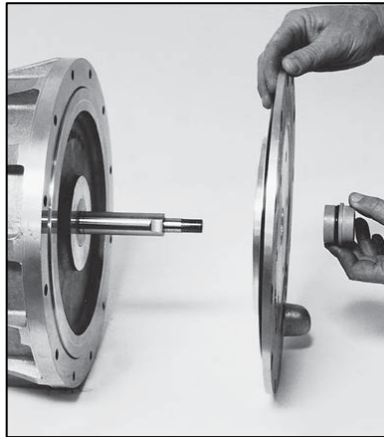

Step 5

As a last step install power cylinder cover to power cylinder body and secure with fasteners provided.

DISASSEMBLY / REASSEMBLY

REASSEMBLY HINTS AND TIPS

Upon performing applicable maintenance to the air distribution system, the pump can now be reassembled. Please refer to the disassembly instructions for photos and parts placement.

To reassemble the pump, follow the disassembly instructions in reverse order. The air distribution system needs to be assembled first, then the diaphragms and finally the wetted path. The applicable torque specifications are on this page.

The following tips will assist in the assembly process:

- Lubricate the air valve bore, center section shaft and pilot spool bore with NLGI grade 2 white EP bearing grease or equivalent.
- Clean the inside of the center section shaft bore to ensure no damage is done to new shaft seals.
- A small amount of NLGI grade 2 white EP bearing grease can be applied to the muffler and air valve gaskets to lubricate gaskets during assembly.
- Make sure that the exhaust port on the muffler plate is centered between the two exhaust ports on the center section.
- Stainless-steel bolts should be lubed to reduce the possibility of seizing during tightening.

***NOTE:** Use of Loctite® adhesive is recommended for this connection.

Torque all hardware in an opposing torque sequence. Liquid chamber bolts may require periodic retightening. If liquid chamber pre-load torque values fall below: [stainless steel 33.9 N•m (25 ft-lb); ductile iron 108 N•m (80 ft-lb)] retighten both liquid chambers to a maximum of: [stainless steel 58.3 N•m (43 ft-lb); ductile iron 163 N•m (120 ft-lb)]. Liquid chamber torque loading must be even. If any of the liquid chamber bolts require retightening, it is suggested that all liquid chamber bolts be retightened to ensure even distribution.

Maximum Torque Specifications

Description	Torque (Stainless Steel)	Torque (Ductile Iron)
Inner Piston Screws*	58.3 N•m (43 ft-lb)	58.3N•m(43ft-lb)
Outer Piston	140 N•m (103 ft-lb)	140N•m(103ft-lb)
Air Valve Bolts	9.5 N•m (84.1 in-lb)	9.5N•m(84.1in-lb)
Inlet/DischargeManifoldBolts	17.6 N•m (13 ft-lb)	163N•m(120ft-lb)
Center Section Cover Bolts	54.0 N•m (40 ft-lb)	54.0N•m(40ft-lb)
Air Chamber Screws*	88.1 N•m (65 ft-lb)	163N•m(120ft-lb)
Liquid Chamber Bolts	58.3 N•m (43 ft-lb)	163N•m(120ft-lb)

*Use #242 removable Loctite® on fastener threads.

DISASSEMBLY / REASSEMBLY

BUSHING SEAL INSTALLATION

Pre-Installation

After all the old seals have been removed, the inside of the bushing should be cleaned to ensure no debris is left that may cause premature damage to the new seals.

Installation

1. To prevent damaging the inside surface of the new seal, wrap electrical tape around each leg of the needle-nose pliers. (Heat shrink tubing may also be used.)
2. With a new seal in hand, place the two legs of the needle-nose pliers inside the seal ring. (See Figure A.)
3. Open the pliers as wide as the seal diameter will allow, then with two fingers pull down on the top portion of the seal to form a kidney bean shape. (See Figure B.)
4. Lightly clamp the pliers together to hold the seal into the kidney shape. Be sure to pull the seal into as tight of a kidney shape as possible. This will allow the seal to travel down the bushing bore with greater ease.
5. With the seal clamped in the pliers, insert the seal into the bushing bore and position the bottom of the seal into the correct groove. When the bottom of the seal is seated in the groove, release the clamp pressure on the pliers. This will allow the seal to partially snap back to its original shape.
6. After removing the pliers, you will notice a slight bump in the seal shape. Before the seal can be resized properly, the bump in the seal should be removed as much as possible. This can be done with either a Phillips screwdriver or your finger. With the side of the screwdriver or your finger, apply light pressure to the peak of the bump. This pressure will cause the bump to be eliminated almost completely.
7. Lubricate the edge of the shaft with NLGI grade 2 white EP bearing grease.
8. Slowly insert the center shaft with a rotating motion. This will complete the resizing of the seal.
9. Repeat these steps for the remaining seals.

Tools

The following tools can be used to aid in the installation of the new seals:

- Needle-Nose Pliers
- Phillips Screwdriver
- Electrical Tape

Figure A


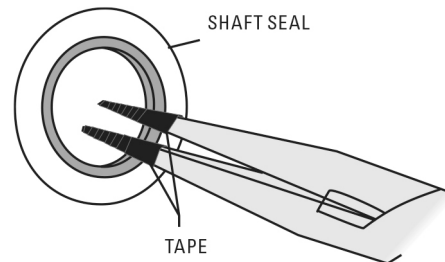



Figure B

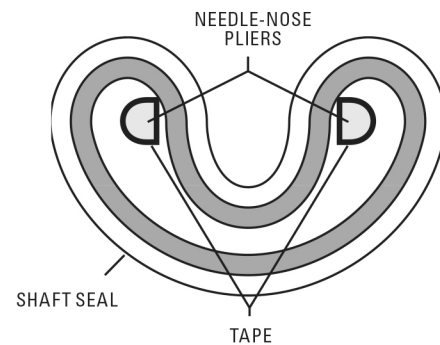

SECTION 8

EXPLODED VIEW AND PARTS LIST

H800 METAL DUCTILE IRON – WETTED PATH

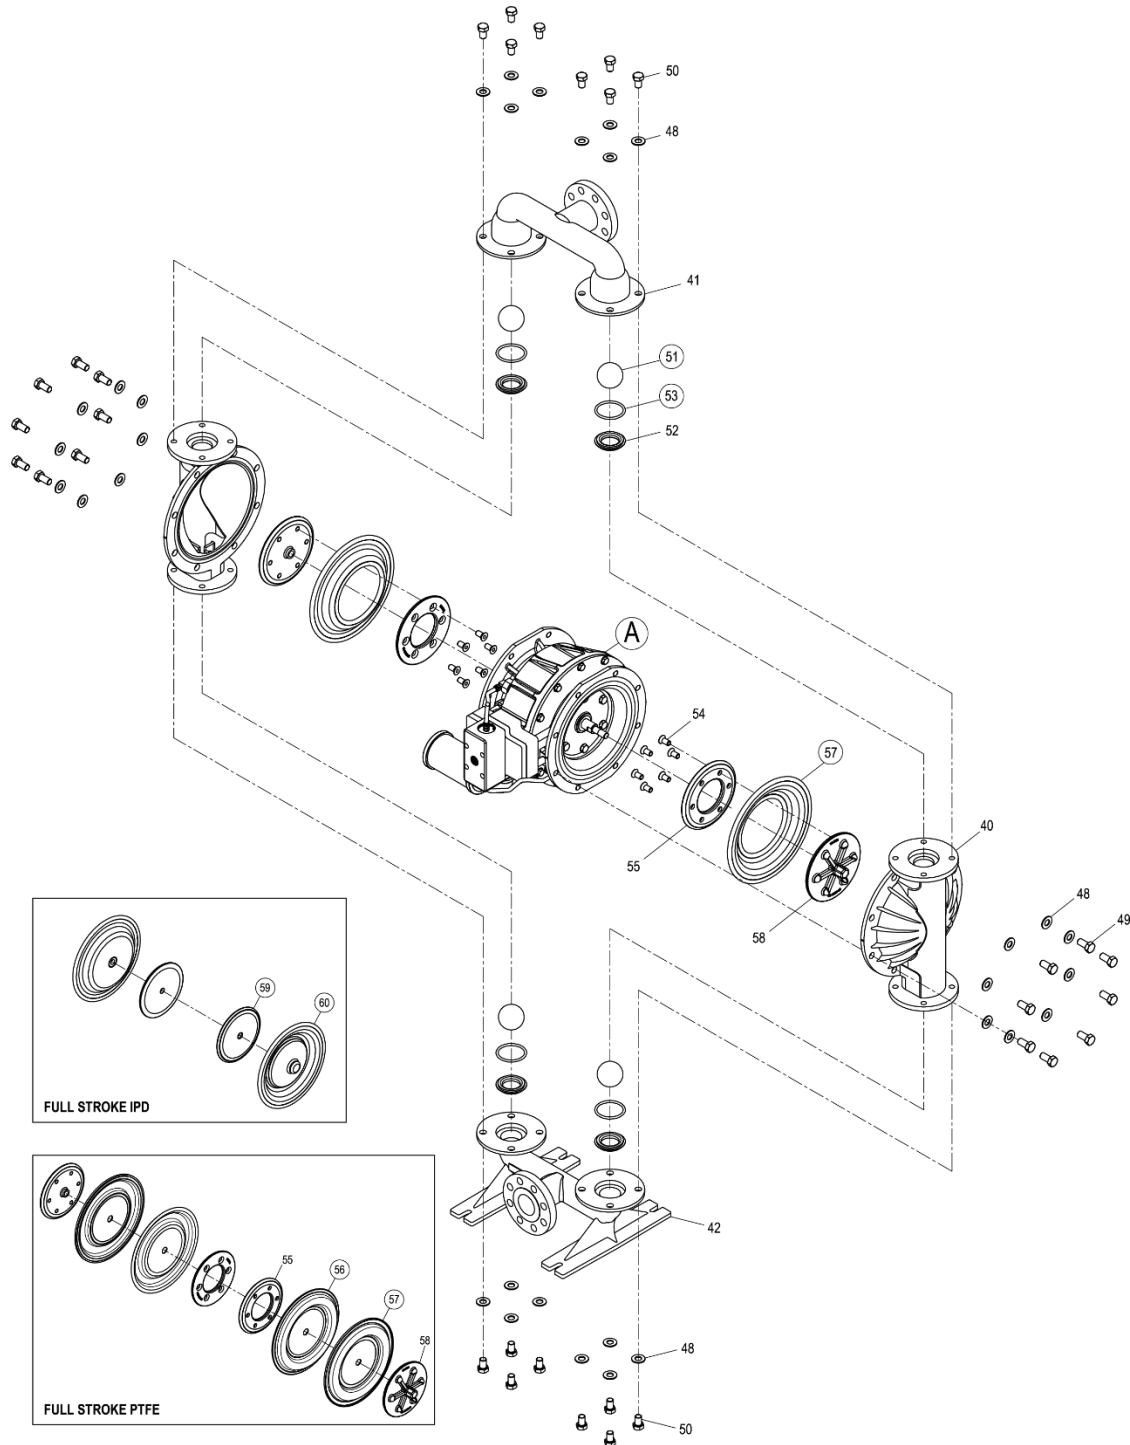


ALL CIRCLED PART IDENTIFIERS ARE INCLUDED IN REPAIR KITS

LW0188 REV. C

EXPLODED VIEW AND PARTS LIST

H800 STAINLESS STEEL/ALLOY C – WETTED PATH

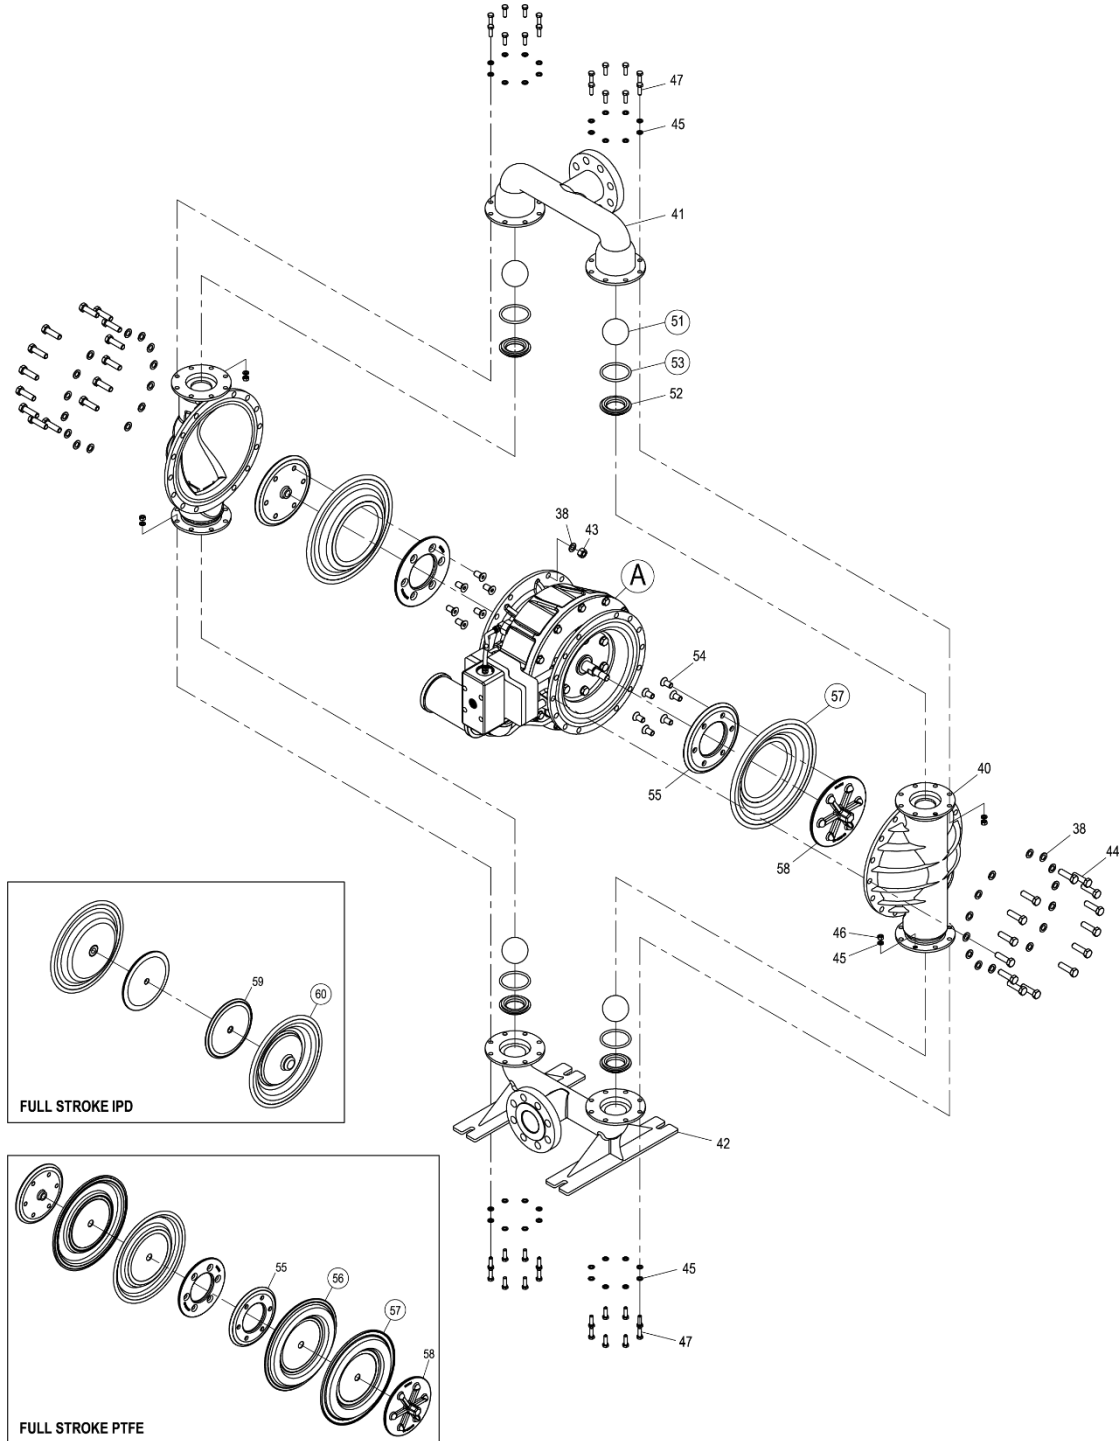


ALL CIRCLED PART IDENTIFIERS ARE INCLUDED IN REPAIR KITS

LW0186 REV. D

EXPLODED VIEW AND PARTS LIST

H800 METAL – CENTER SECTION

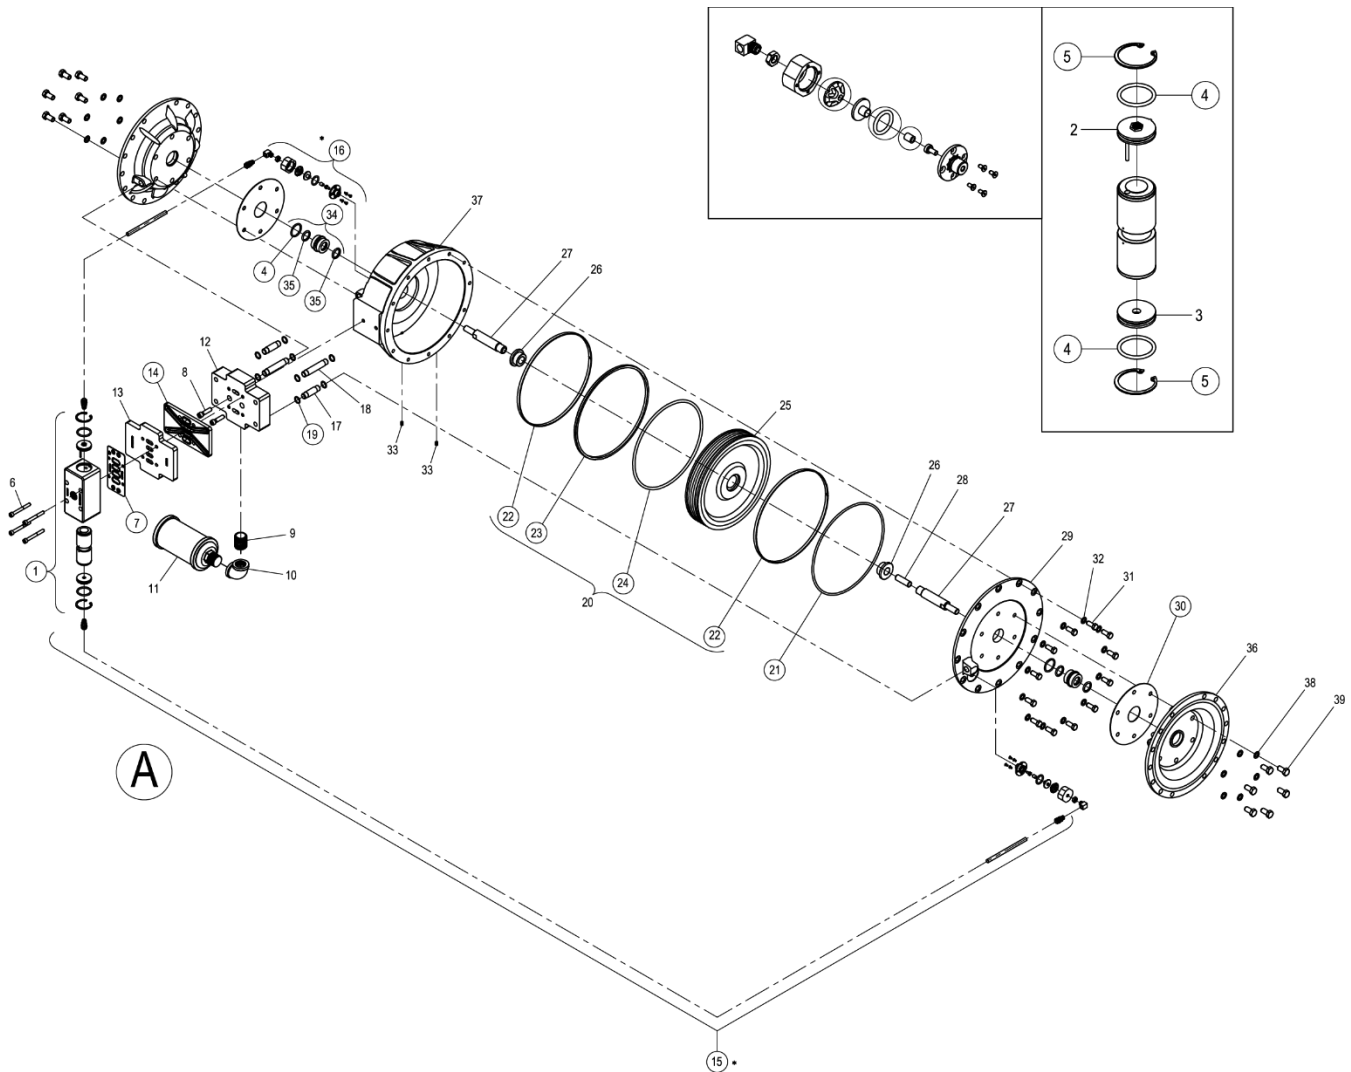

ALL CIRCLED PART IDENTIFIERS ARE INCLUDED IN REPAIR KITS

LW0189 REV. C

EXPLODED VIEW AND PARTS LIST

Model Description			H800/WWWAA/...	H800/SSSAA/...	H800/HHSAA/...
Item	Part Description	Qty	P/N	P/N	P/N
Air Distribution Components					
1	Air Valve Assembly¹	1		08-2003-01	
2	End Cap w/Guide Nylon	1		08-2306-23	
3	End Cap w/o Guide Nylon	1		08-2336-23	
4	O-Ring (-220) (Ø1.359 x Ø.139)	2		15-2390-52	
5	Retaining Ring	2		15-2650-03	
6	Screw, SHC, Air Valve (5/16"-18 x 2 3/4")	4		08-6000-03-83	
7	Air Valve Gasket	1		08-2601-52	
8	Screw, SHC, Manifold (3/8"-16 x 1 1/2")	2		99-6034-08	
9	Nipple, 1" NPT, Galvanized	1		08-7430-08-60	
10	Elbow, 90°, 1" NPT, Galvanized	1		08-7840-08-60	
11	Muffler	1		15-3510-99	
12	Manifold, Bottom Air Valve	1		08-2700-01	
13	Plate, Isolator Cover	1		08-2705-01	
14	Gasket, Air Valve Isolator	1		08-2603-52	
15	Relief Tube Assembly	2		08-9232-99-60	
16	Pressure Relief Valve Assembly	2		08-2740-99-60	
	Rebuild Pressure Relief Seal Kit	1		99-9346-99	
17	Pipe	2		08-7520-03-60	
18	Pipe	2		08-7510-03-60	
19	O-Ring (-114) Pipe (Ø.612 x Ø.103)	8		00-2870-52	
20	Power Piston Seal Kit ²	1		08-9210-99-60	
21	O-Ring (-379) Cover (Ø10.975 x Ø.210)	1		-	
22	Guide Ring, Bronze-Filled	2		-	
23	Slipper Seal, PTFE-Filled	1		-	
24	O-Ring (-450) Piston (Ø10.475 x Ø.275)	1		-	
25	Piston, Cylinder	1		08-3720-01-60	
26	Bushing, Cylinder Piston	2		08-3730-03-60	
27	Shaft	2		08-3800-03-60	
28	Stud, Shaft	1		08-6150-08-60	
29	Cover, Center Section	1		08-3000-01-60	
30	Gasket, Center Section	2		08-3260-52-60	
31	Screw, HHC (7/16"-14 x 1")	12		08-6260-08-60	
32	Washer (7/16")	12		08-6830-03-60	
33	Pipe Plug, 1/16" NPT	2		08-7030-08-60	
34	Bushing, Assembly Center Section ³	2		08-3300-99-60	
35	Glyd Ring	4		15-3210-55-225	
	O-Ring (-220) (Ø1.359 x Ø.139) Item No. 4	2		15-2390-52	
36	Chamber, Air	2	08-3653-02-60		08-3653-03-60
37	Section, Center	1		08-3150-01-60	
38	Washer (1/2")	12		08-6840-03-60	
39	Screw, HHC (1/2"-13 x 1")	12		08-6132-08	
Wetted Path Components					
40	Liquid Chamber	2	08-5000-02-60	08-5000-03-60	08-5000-04-60
41	Discharge Manifold (ANSI)	1	08-5020-02-62	08-5020-03-62	08-5020-04-62
	Discharge Manifold (DIN)	1	08-5020-02-63	08-5020-03-63	08-5020-04-63
42	Inlet Manifold (ANSI)	1	08-5080-02-62	08-5080-03-62	08-5080-04-62
	Inlet Manifold (DIN)	1	08-5080-02-63	08-5080-03-63	08-5080-04-63
43	Hex Nut, (1/2"-13)	28			15-6420-03
44	Screw, HHC (1/2"-13 x 1 3/4")	28			08-6190-08-60
38	Washer (1/2")	56			08-6840-03-60
45	Washer (5/16")	64			08-6730-03-42
46	Hex Nut, (5/16"-18)	32			08-6400-03
47	Screw, HHC (5/16"-18 x 1")	32			08-6180-03-42
48	Washer (5/8")	32	15-6732-08		
49	Screw, HHC (5/8"-11 x 1 1/4")	16	15-6193-08		
50	Screw, HHC (5/8"-11 x 1")	16	08-6187-08		
Valve Balls/Valve Seats/Valve O-Rings					
51	Ball, Valve	4		*	
52	Seat, Valve	4	08-1120-08-60	08-1120-03-60	08-1120-04-60
53	O-Ring, Seat	4		*	
Full Stroke TPE/PTFE Components					
54	Screw, SFCHC (1/2"-13 x 1")	12		08-6220-03-60	
55	Inner Piston	2	08-3702-02		08-3702-03
56	Diaphragm, Full Stroke PTFE, Back-up	2		*	
57	Diaphragm, Primary	2		*	
	Diaphragm, Full Stroke PTFE, Primary	2		*	
58	Outer Piston	2	08-4565-02	08-4565-03	08-4565-04
Full Stroke IPD Components					
59	Inner Piston	2		08-3700-03	
60	Diaphragm, Full Stroke IPD, Primary	2		*	

LW0187 Rev. D

* See elastomer chart - Section 9

¹ Air Valve Assembly includes items 2, 3, 4, and 5.² Power Piston Seal Kit includes item numbers 21, 22, 23, and 24.³ Bushing Assembly, Center Section, includes qty. 1 of item 34 and 4.

0504 Specialty Code - DIN Flange

All boldface items are primary wear parts.

SECTION 9**ELASTOMER OPTIONS**

MATERIAL	DIAPHRAGMS (2)	FULL-STROKE DIAPHRAGMS (2)	FULL-STROKE BACK UP DIAPHRAGMS (2)	FULL-STROKE IPD DIAPHRAGMS (2)	VALVE BALL (4)	VALVE SEAT O-RING (4)
PTFE		08-1011-55			08-1080-55	08-1200-55
FDA WIL-FLEX™	08-1011-57		08-1067-57	08-1032-57	08-1080-57	
Wil-flex™				08-1032-58	08-1080-58	08-1200-58

LW0187 Rev. D

NOTES

NOTES

WILDEN®

PSG
22069 Van Buren Street
Grand Terrace, CA 92313-5651 USA
P: +1 (909) 422 -1730
psgdover.com



Where Innovation Flows

Copyright 2021 PSG®, a Dover® Company
PSG® reserves the right to modify the information and illustrations contained in this document without prior notice. This is a non-contractual document.